

Step One: Set the Clock Press – **MODE** twice See the clock symbol display

Press - **ADJUST** to set Hour Press – **SET** Press – **ADJUST** to set minute Press – **MODE** to lock the current time

Step Two: Press – **MODE** **S** will display

Set feeding cycle **IMMEDIATELY** Press - **SET**

Press - **ADJUST** to set feeding cycle ( one or two cycle )

Feeding Cycle will display ( Left Top Corner )

↓ = 1 cycle per feeding

↓ ↓ = 2 cycle per feeding

Press - **MODE** to get to 2<sup>nd</sup> feeding timer ( Use ADJUST to set cycle )

Press - **MODE** to get to 3<sup>rd</sup> feeding timer ( Use ADJUST to set cycle )

Press - **MODE** to get to 4<sup>th</sup> feeding timer ( Use ADJUST to set cycle )

Press - **SET** to confirm

Press - **MODE** twice to get back to clock main screen

Step Three: Program feeding time Press - **SET** **1** will display left top corner ( Display symbols are very small )

Press - **ADJUST** to set 1<sup>st</sup> feeding time

Press - **MODE** to get to **2** **3** **4**

Press - **MODE** after the **4** will go back to main clock screen



Instruction also available at [www.jbjlighting.com](http://www.jbjlighting.com)